



## Roof anchor

Stainless steel anchor sized for your Monitoring borehole diameter

## Monitoring Rod

Fiberglass rods Cut to length for your desired monitoring depth

## MHL Collar


Stainless steel Thrust pins secure the unit against the inside of the borehole. A reflectorized rod will drop when the user adjusted trip set point is actuated. Unit can be reset after a trip.

# MHL Roof Monitor



## Resettable and adjustable

The MHL can be reset after a trip and the distance to trip the drop flag is user adjustable with a flat head screwdriver

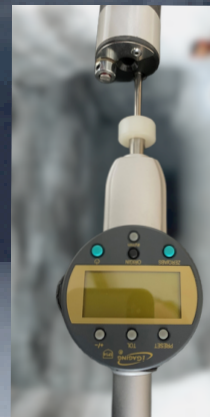

## Movement indication

A dial gauge ( sold Separately) is used to read movement as small as thousandths of an inch.

The MHL roof monitor is easily installed in a borehole 1-5/8" and larger. Monitoring depth is unlimited and custom made for your required depth.